

## DALI Programmer


Model: BK-CS01-SDL

### Device parameters

Supply voltage	5V USB Bus powered
Current consumption	500mA Max.
Int. DALI Bus power	15V/10mA Max.
USB driver,PC/SC driver	Driver free
Interface	USB Full-Speed(12MBit/S)
Indicators	LED*5(green/red)+Buzz
Housing material	Anodizing of aluminum alloy
Color	Black



### Interface description

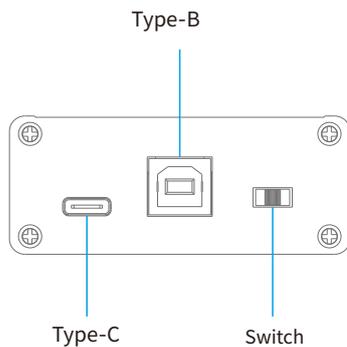

#### USB interface:

Responsible for the power supply and communication of the programmer. It supports Type-B and Type-C interfaces. Only one of them can be used at the same time.

#### Switch:

Switch the working mode through slider switch, there are two working modes to choose


Switch	OP mode	Int. DALI Bus power
1	Online	ON
2		OFF
3	Offline	ON

### Product label

#### Front label




#### Buttom label

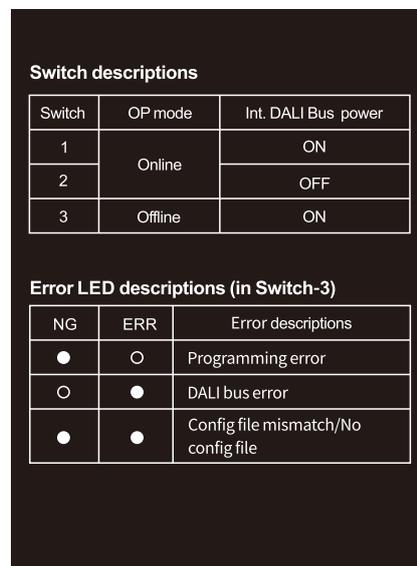

## Instructions

### Online mode

- Programmer is connected to the PC host via a Type-B or Type-C data cable
- Connect DA1 and DA2 of the programmer to the DALI port of the LED driver
- When programming the parameters of the DALI device, it is necessary to power to the DALI device
- If the switch position is at "Switch 2", an external DALI bus power is required
- Set the parameters of the LED driver through the EasyConfigurator software

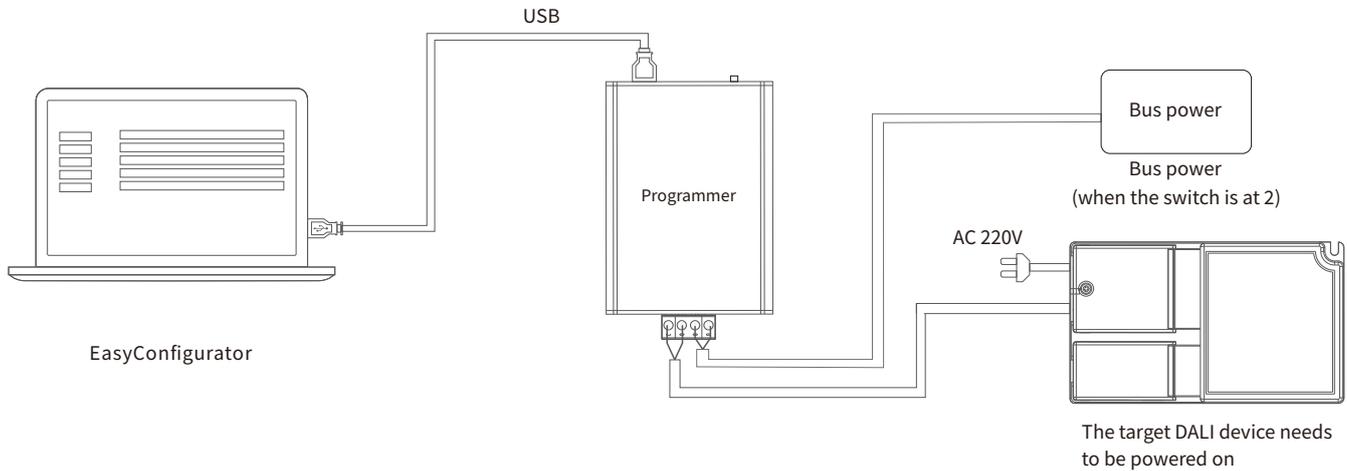


### Switch1 and switch 2 (Online mode)

USB	DALI	OK	NG	ERR	Buzz	State	Instruction
●	○	○	○	○	0	Power-on	After power on, the USB indicator will be blinking
○	●	○	○	○	0	Connected	Lights up after the driver is connected, flashes during communication
○	○	○	●	○	4	COMM fault	Lights up when communication error occurs
○	○	○	○	●	3	DALI-BUS fault	Lights up when the DALI bus is short- circuited, and the buzzer sounds 3 times

### Offline mode

- Power the programmer through the USB data cable(the power supply device can be a mobile power supply or a PC host)
- Connect DA1 and DA2 of the programmer to the DALI port of the LED driver
- When programming the parameters of the DALI device, it is necessary to power to the DALI device
- Download the LED driver configuration parameters preset in the DALI programmer to the LED driver

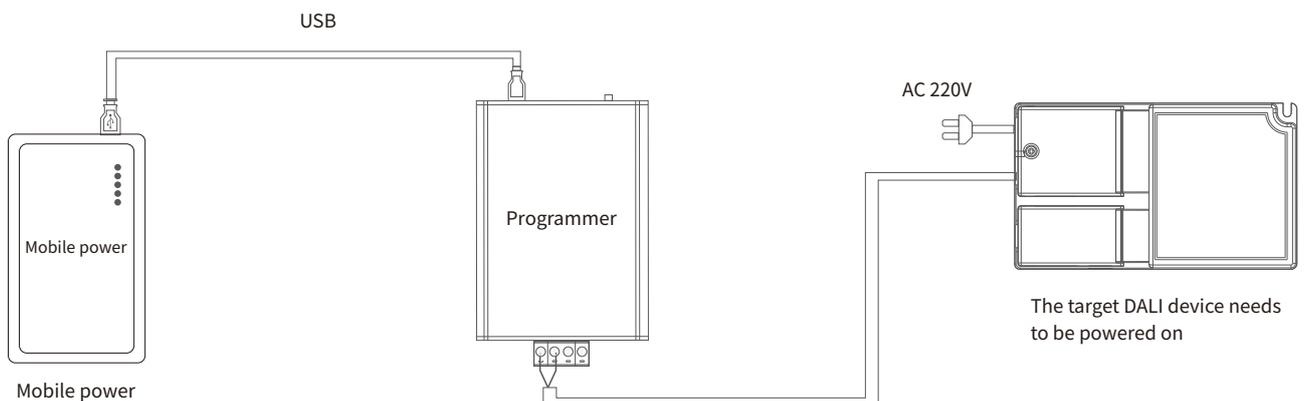


**Switch 3(Offline mode)**


USB	DALI	OK	NG	ERR	Buzz	State	Instruction
●	○	○	○	○	0	Power-on	After power on, the USB indicator light will be always on
○	●	○	○	○	0	Connected	Lights up after DALI device is connected, flashes during communication
○	○	●	○	○	1	Programming success	It lights up after programming, and the buzzer sounds onc
○	○	○	●	○	4	Programming error	It turns on after programming error, and the buzzer rings 4 times
○	○	○	●	●	10	Invalid configuration file	When there is no configuration file inside DALI Programmer, it will light up and the buzzer will ring 10 times
○	○	○	○	●	3	DALI-BUS fault	Lights up when the DALI bus is short-circuited, and the buzzer sounds 3 times

**Size**

Unit:mm

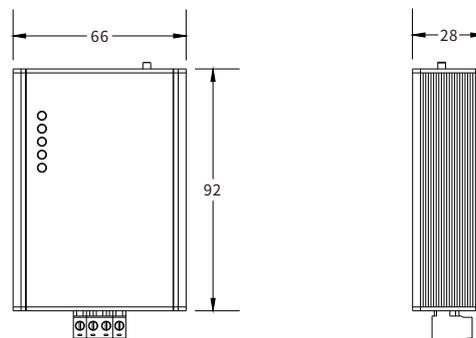

**Packaging**

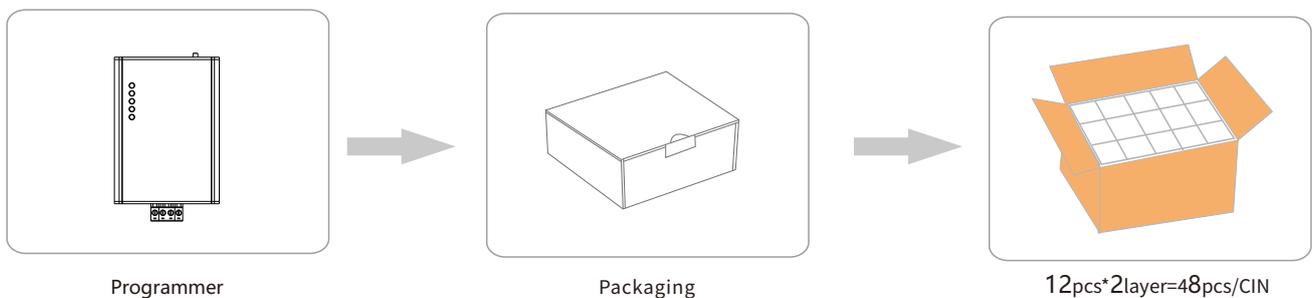

Model	Product size	Weight	Packaging size	Carton size	Qty/carton	N.W	G.W
CS01	L 92*W66*H27mm	144g	L 135*W120*H33mm	L415*W290*H255mm	48pcs	6.91kg	8.41kg

**Additional information**

1.For more information, please send an email to [info@bokedriver.com](mailto:info@bokedriver.com).