


Constant current independent dimmable driver

DUL Series suffix DF(DALI-2+pushDIM+1-10V/10V PWM/Rx+EL+CLO+corridorDIM+ DALI Programmable+NFC Programmable)

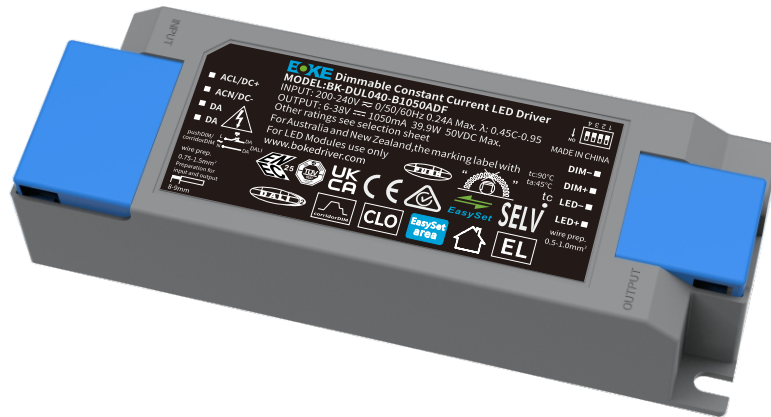

Features

- Support DALI-2+pushDIM+1-10V/10V PWM/Rx dimming mode
- Support advanced functions such as corridorDIM, EL, CLO
- The output current programming can be realized through the DALI interface and the NFC interface
- Multi-level current output can be realized by DIP-switch
- Soft dimming and flicker-free at any brightness, meets the new requirements of ErP certification
- Using HPC patented technology, at any dimming level, the brightness of the lights is the same
- Dimming range 1~100%, output current accuracy 2%
- Standby power input<0.5W, meets the requirements of ErP certification
- High PF, high efficiency, low THD
- Screw-free and pressing type strain relief, supports thicker cables and is easier to install
- Intelligent LED hot-plug protection function
- SELV and Class II design, suitable for use outside of the luminaires
- Compliance with CE, ENEC, UKCA, RCM, CCC, DALI-2 and other certifications
- IP20 protection grade, indoor use
- Nominal life-time up to 100,000 h
- 5.5-year guarantee

Interfaces

- DALI-2(DT6)
- PUSH(pushDIM)
- 1-10V 3in1(1-10V/10V PWM/Rx)

Functions

- Support central emergency application (dimming normal in DC input)
- Support self-contained emergency application
- Emergency lighting(EL)
- Constant light output function(CLO)
- Corridor dimming (corridorDIM)
- Programming via DALI(EasySet)
- Programming via NFC (EasySet)
- Protective features (short-circuit, overload, no-load, hot plug-in protection)

Suitable for lights


- Suitable for lights with independent drivers such as downlights, spotlights, panel lights, etc

Typical applications

- LED indoor lighting
- LED office lighting
- LED commercial lighting



Model coding rules of DUL series

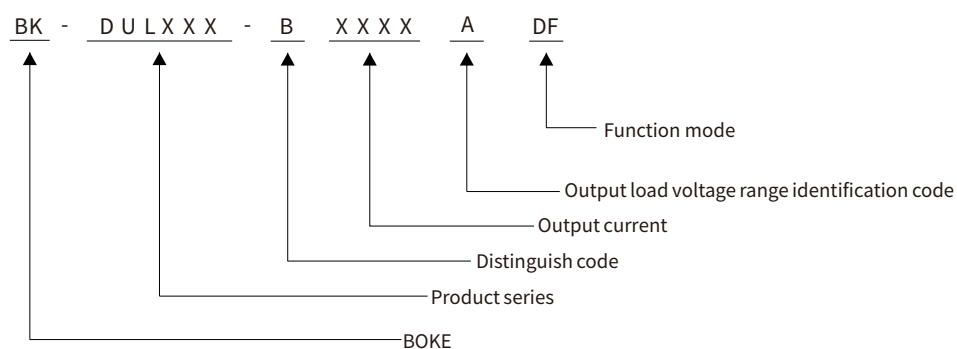

Function list

Model	suffix	Wired dimming			Advanced functions				Device Configuration	
		DALI-2	pushDIM	1-10V	corridorDIM	AOC	EL	CLO	DALI interfaces	NFC interfaces
BK-DUL040-B	DP	√	√	√	√	√	√	√	√	
	DF	√	√	√	√	√	√	√	√	√

* The description in this specification is only applicable to the products with the suffix DF and the model are DUL040-B.

Model list

Model	Input voltage	Output power	Output voltage	Output current	Dimension
BK-DUL040-B1050ADP	200-240VAC/DC	40W MAX.	6-42VDC	0.60-1.05A	L137*W46*H30mm
BK-DUL040-B1050ADF	200-240VAC/DC	40W MAX.	6-42VDC	0.60-1.05A	L137*W46*H30mm

* The description in this specification is only applicable to the products with the suffix DF and the model are DUL040-B.

Technical data

Product model	BK-DUL040-B1050ADF
Output parameters	
Regulation method	Constant Current
Rated output current range	0.6-1.05A,see the DIP-switch for details
Rated output voltage range	6-42VDC,see the DIP-switch for details
Rated output power	40W Max,see the DIP-switch for details
Output current adjustment	DIP S.W(10 levels)
Output current ripple LF	±2%
Output current accuracy	±2%
Linear regulation	±1%
Load regulation	±1%
No load output voltage	50VDC
Flicker-free(typical)	Flickering percent(IEEE 1789)=0.111%(100Hz), Flicker index(IEEE 1789)=0.000(100Hz), Pst LM = 0.02, SVM = 0.003, (The above parameters are obtained from testing the panel lights)
Input parameters	
Rated input voltage range	200-240VAC 200-240VDC
Input voltage range	180-264VAC 180-264VDC
Input votage shock	<380 V AC
Input current	<0.24A (Rated input voltage)
Input frequency	0/50/60Hz
Input PF/Input DF(typical)	PF: 0.97, DF:0.97 ,see the electrical values below for details
Input THD(typical)	8.5% ,see the electrical values below for details
Efficiency(typical)	89% ,see the electrical values below for details
In-rush current(typical)	7.1A peak ,186us duration(50 % Ipeak), see the description below for details
Start/Switchover/Turn off	<0.7s(AC start),<0.7s(DC start),<0.3s(AC/DC switchover),<0.5s(Turn off)
Switching cycles	> 100,000 switching cycles
Power consumption(typical)	Full load(Pin):45.7W, No load(Pno): N/A, On stand-by(Psb) : <0.5W, Network stand-by(Pnet) : N/A
Safety	
Withstand voltage	I/P-O/P(LED):3750V AC, I/P-DALI: 1500V AC, O/P-DALI: 1500V AC.
Mains surge capability	L-N:2KV(90°/270° , 5 times each with an interval of 60s)(Performance criterion:A)
Leakage current(typical)	0.33mA
Isolation resistance	I/P-O/P:100MΩ/500Vdc/25°C/70% RH
Control interface	
DALI dimming port	Voltage range: 9.5-22.5V, typical 16V, interface current consumption: 1.8mA
pushDIM dimming port	Voltage range: 180-264V 47/63Hz
1-10V dimming port(Non-isolated)	Voltage range: 0-10V, Maximum output current: ≤0.3mA
Auxiliary power supply	N/A
Dimming range	1-100%
Dimming drive mode	AM(amplitude modulation)
Emergency support	
Central emergency system	Supported
Self-contained emergency	Supported
Environment & Life time	
Operating temperature	Ta=-20-45°C
Case temperature	Tc=90°C
Operating humidity	5-85% RH, not condensed
Storage temp./humidity	-40-80°C, 5-85% RH, not condensed
IP grade	IP20
MTBF	500,000H,MIL-HDBK-217F(25°C)
Life-time	Nominal life-time up to 100,000 h, see the description below for details
Vibration resistant	10~500Hz,5G 12min./1cycle,period for 72min. each along X,Y,Z axes
Acoustic Noise	<25dB(30cm, Normal operation)
Environmental protection	RoHS
Certifications and standards	
Compliance certifications	CE, ENEC, UKCA, RCM, CCC, EL, DALI-2
Safety	EN61347-1, EN61347-2-13, EN62384
EMC	EN55015, EN61000-3-2 , EN61000-3-3, EN61000-4-2,3,4,5,6,8,11, EN61547
DALI-2	IEC 62386-101(DALI-2), IEC 62386-102(DALI-2), IEC 62386-207(DALI-2)
EL	Compatible IEC 61347-2- 13 Annex J, compatible with EN 60598-2-22 and EN 50172
RF	N/A


Remarks

- 1.By default, all parameter are measured at 230VAC input, 50Hz, full load and 25°C of ambient temperature.
- 2.The driver can not be installed inside the light. when the driver is used with the light, the EMC of the whole light needs to be tested.


Electrical values

BK-DUL040-B1050ADF


Operating window

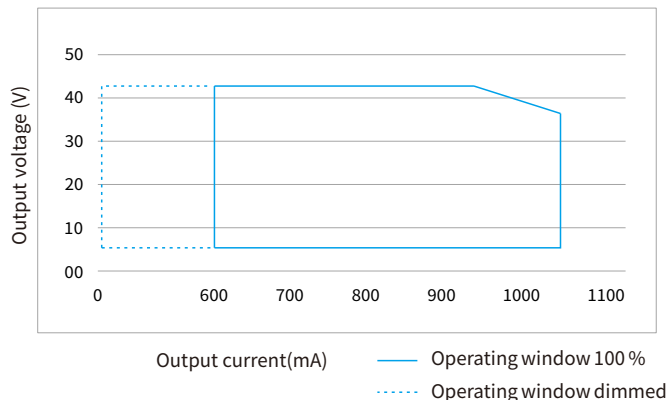


Operating window

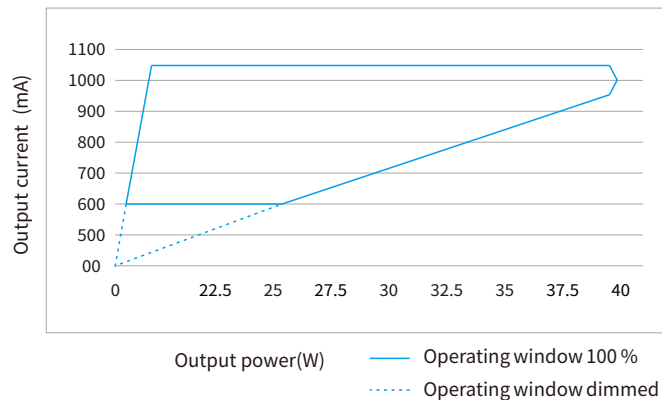


Efficiency vs load

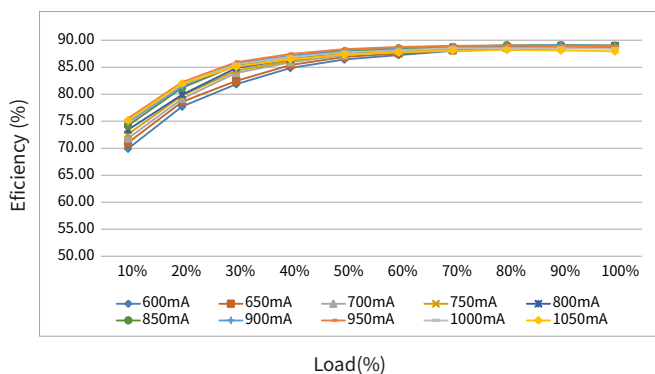


THD vs. Load

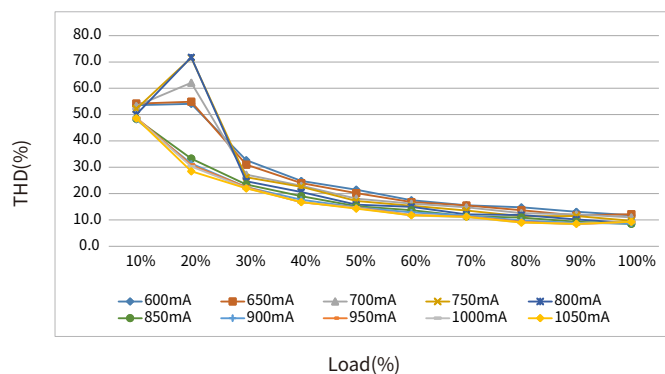

Power factor vs. Load

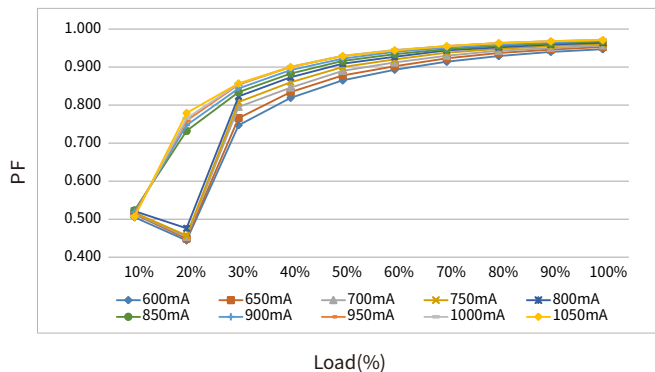


Displacement factor vs. Load

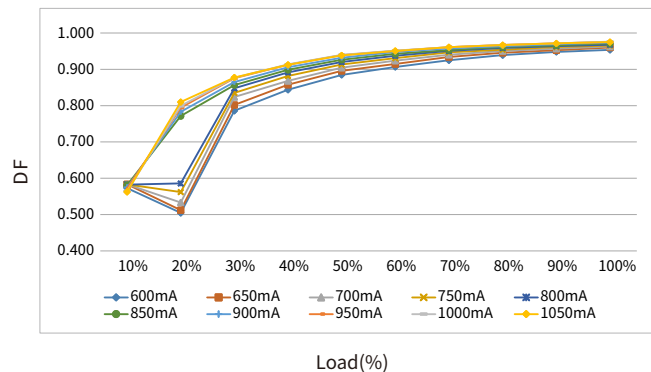

Expected life-time

Life-time vs. case temperature

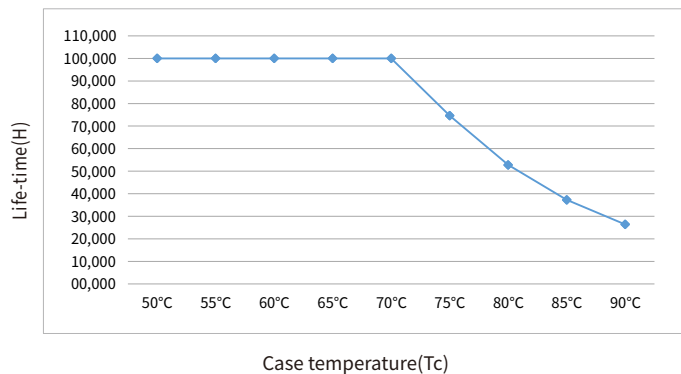


-The life-time of the LED driver is shown in the figure above
(calculated based on the 90% survival rate).

- The relation of tc to ta temperature depends also on the luminaire design.

Surge

Model	Ipeak	Twidth	Condition	Relative number of MCB/pcs														
				B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
BK-DUL040-B1050ADF	7.1A	186us	AC 230V, Full load, Cold start, $T_a \leq 30^\circ\text{C}$, MCB is not installed side by side	33	44	54	67	84	33	44	54	67	84	33	44	54	67	84

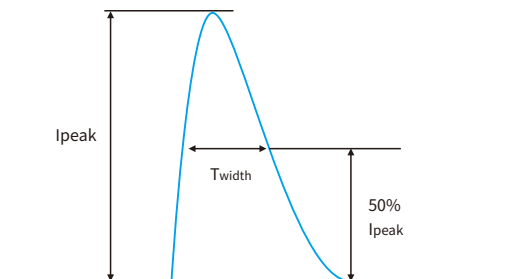

Remarks

- The number of drives mounted under different MCBs in the table is the maximum value. Please do not exceed this number during installation.
- Calculation uses typical values from ABB series S200 as a reference.
- Different brands and models of miniature circuit breakers, the number of drives mounted will be slightly different.
- If the ambient temperature of the MCB installation exceeds 30°C or multiple MCBs are installed side by side, the number of drives mounted will be reduced and the calculation needs to be recalculated.
- Electrician's usually consider Type B for household lighting and Type C for commercial lighting application.

Functions

Output short-circuit behaviour

- Output short-circuit will not damage the driver.
- After removing the short circuit fault, the driver will automatically resume output.

Output no-load operation

- Output no-load will not damage the driver.
- Please turn off the driver first if you need to connect the LED load.

Output hot plug-in protection

- This function is used to prevent LED light that are far below the driver's no-load voltage burnout when hot plugged into a powered driver output.
- This function can be enabled or disabled through the programming interface. If enabled, when the LED light is connected to the powered driver, the LED light will not light up, you can restart the drive to restore normal. If disabled, when the LED light is connected to the powered driver, the LED light will turn on or off according to the current brightness level.
- Please refer to the parameters configure in the "Device configuration" section for information on whether the default factory settings are enabled.
- Factory default Enabled or not please check the "Device configuration" section.

Note:

When the hot plug-in protection is enable, the following applications may not achieve the expected effect:

1. When the output of the driver is connected to the color temperature switch:
When the switch is used to change the color temperature, the hot plug-in protection of the driver will be triggered, and the LED will not be lit.
 2. When the LED driver is used in conjunction with a self-contained (independent) emergency control device:
Use the self-check test switch of the emergency control device to test the emergency function and when exiting the emergency mode, the driver's hot plug-in protection will be triggered and the LED will not be lit.
- The above two application drivers should turn off the hot plug-in protection function in order to achieve good working results.

Driver restart method

There are two ways to restart the driver:

- Through the AC input: disconnect the AC of the driver and power it again.
- Through dimming interface.
DALI: send "OFF" command first, then send "MAX" command.
pushDIM: short press pushbutton two times, then long press pushbutton.
1-10V: first adjust the output voltage of the dimmer to 0.9V or below, then adjust it to 1V or above.

Output overload protection

- The LED driver turns off the output if the output voltage range is exceeded.
- The output will be activated again after restart the LED driver.

Adjustable output current (AOC)

- The output current of the driver can be adjusted within a certain range, and 2 options can be selected through the EasySet configuration software.

Setting 1 (default): By DIP-switch setting

The output current is determined by the selection of the DIP-switch.

Setting 2: By programming setting

The output current is determined by the programming setting.

Corridor dimming (corridorDIM)

- Please see the "corridorDIM dimming" section.

Constant light output (CLO)

- The luminous flux of a LED decreases constantly over the life-time.
- The CLO function ensures that the emitted luminous flux remains stable. For that purpose the LED current will increase continuously over the LED life-time.
- In EasySet configuration it is possible to select a start value (in percent) and an expected life-time. The LED driver adjusts the current afterwards automatically.

Emergency lighting (EL)


- The driver works normally under DC input.
- When the driver is applied in DC input, the positive pole of the DC cable should be connected to the ACL/DC+ terminal, and the negative pole of the DC cable should be connected to the ACN/DC- terminal. If the connection is reversed, the driver will not be damaged, but it will affect the EL function normal work.
- The output response action after DC input can be set through the EasySet configuration software.
Setting 1: When DC input, the output of the driver remains unchanged, and the dimming function responds normally.
Setting 2 (default): When DC input, the output of the driver jumps to the set brightness of 15%, and the dimming function is invalid.

Configuration programming (EasySet)

- The programming configuration of the driver is realized using the BOKE EasySet programming suite and through the driver's DALI interface or NFC interface.
- Please see the "Device configuration" section.
- More information about the EasySet programming suite can be found at www.bokedriver.com.

Label

BK-DUL040-B1050ADF

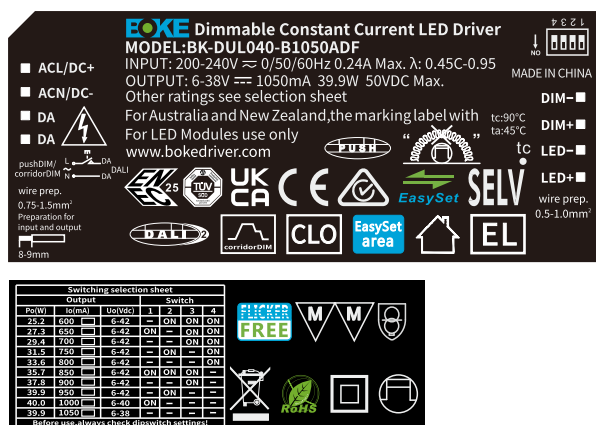

DIP-switch & output current

BK-DUL040-B1050ADF

Output			1	2	3	4
Prated(w)	Irated(mA)	Voltage(Vdc)				
25.20	600	6-42	--	ON	ON	ON
27.30	650	6-42	ON	--	ON	ON
29.40	700	6-42	--	--	ON	ON
31.50	750	6-42	--	ON	--	ON
33.60	800	6-42	--	--	--	ON
35.70	850	6-42	ON	ON	ON	--
37.80	900	6-42	--	--	ON	--
39.90	950	6-42	--	ON	--	--
40.00	1000	6-40	ON	--	--	--
39.90	1050 ★	6-38	--	--	--	--

Remarks:


- ★ It means that this item is the factory default current.
- It means that this channel is OFF.

Insulation between circuits


Isolation	Input	Output	Case	DALI	PUSH	DIM	PWM
Input	-	Double	Double	Basic	-	Basic	Double
Output	Double	-	Basic	Double	Double	-	-
Case	Double	Basic	-	Double	Double	Basic	Basic

Optional accessories (See the parts specification for details)


Optional 1: Wiring type

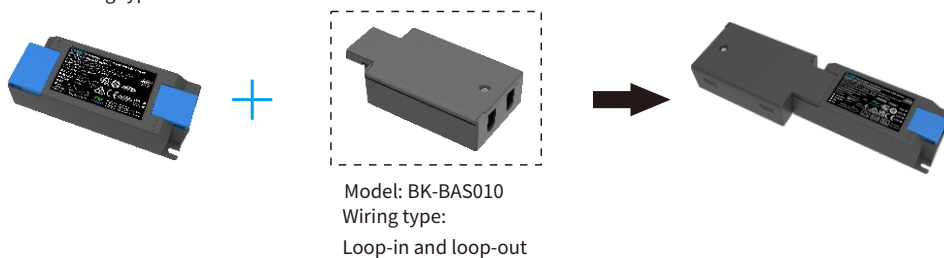

Optional2: Pluggable connector type,5Pole(WAGO)

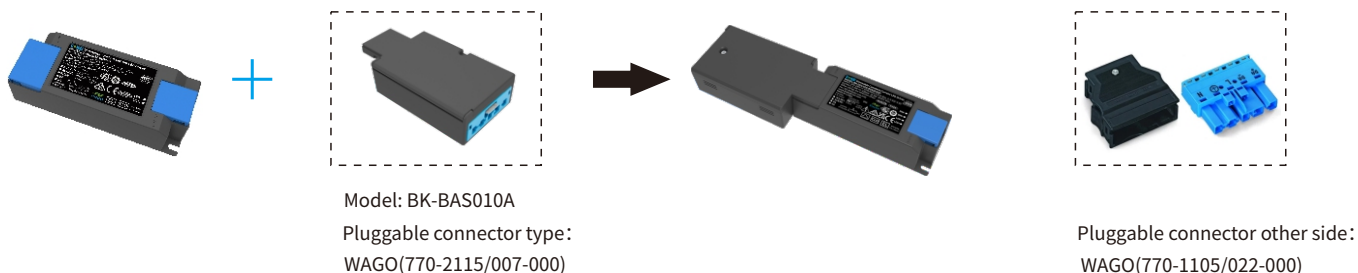


Optional3: Pluggable connector type,5Pole(Wieland)

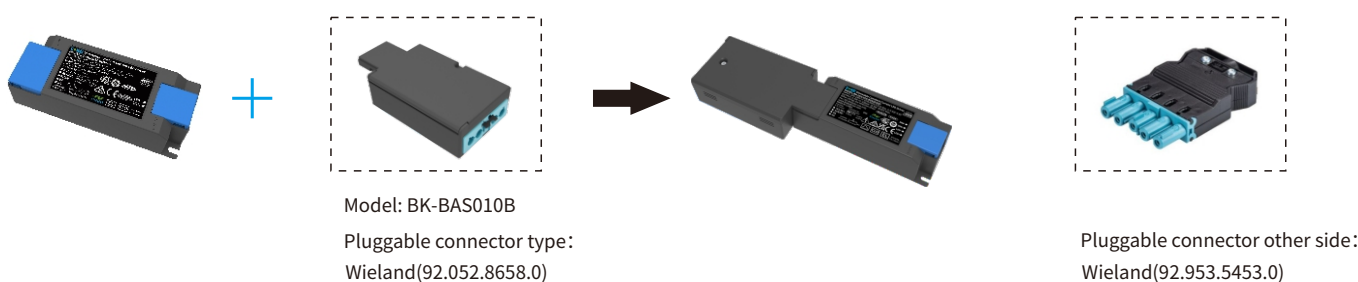

DALI dimming application

Wiring diagram

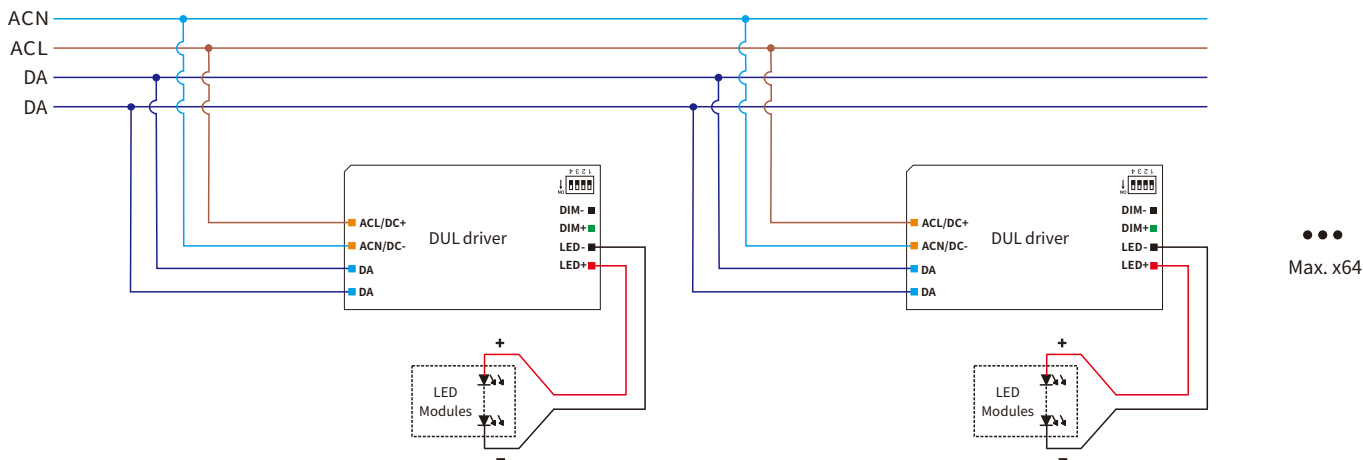

Switch to the DALI dimming mode

- After installation according to the wiring diagram of DALI dimming application, the driver will automatically switch to the DALI control mode after receiving any DALI command.

Remarks:

- Standard DALI control line voltage range:9.5V to 22.5V ,type 16V.
- The two DALI control lines polarity-reversible.
- Max. 64 DALI drivers per DALI control line.
- The maximum distance length of the DALI control line is 300m at $2 \times 1.5\text{mm}^2$.
- DALI bus can be wired together with any mains voltage cables, but separate wiring is recommended.
- The configuration parameters of the driver can be set through the DALI configuration tool or DALI application controller during installation, such as setting device address, group address, power-on level, bus-failure level, scene level, fade time, dimming curve, etc.

Please refer to the table below

Cable size	Distance
2×0.50mm ²	max.100m
2×0.75mm ²	max.150m
2×1.00mm ²	max.200m
≥2×1.50mm ²	max.300m


Power-on level :

When the driver is in DALI-2 dimming mode, the factory default level after each power-on is the brightest.

The power-on level can be set through the DALI configuration tool or DALI application controller during installation, and can be set to memory or fixed any brightness (such as off, darkest, 50%, etc.).

Note: The recommended setting for the default factory power-on level of the DALI-2 driver is the brightest in the DALI-2 standard.


Dimming curve

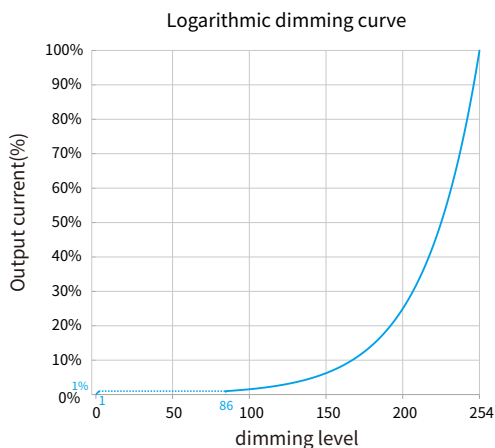

Remarks: The dimming curve can be selected by DALI configuration. The default is logarithmic dimming curve.

pushDIM dimming application

Wiring diagram

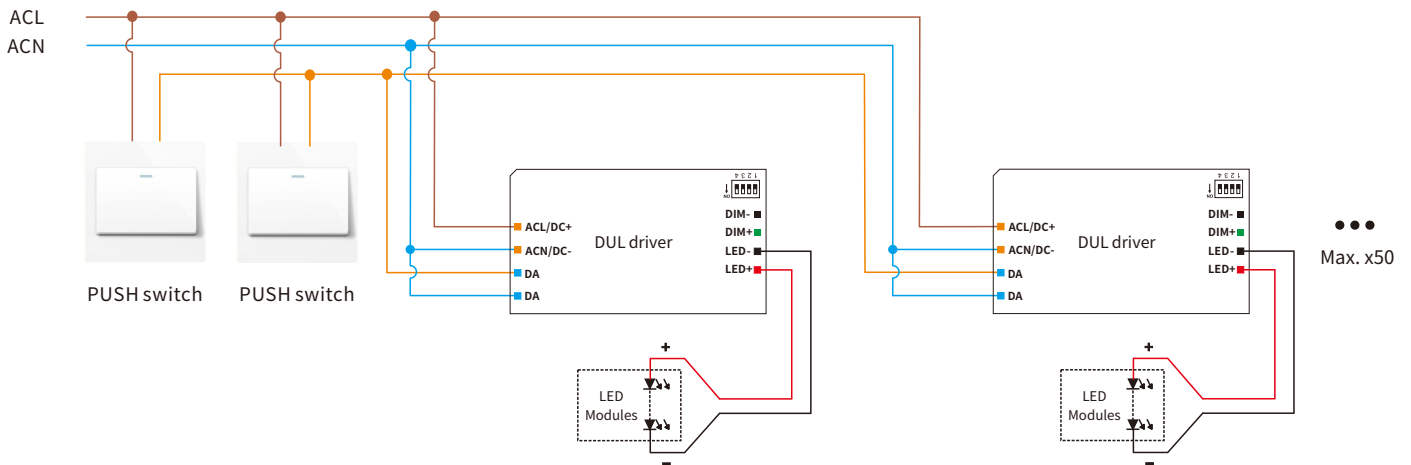

Switch to the pushDIM dimming mode

- According to the wiring diagram of the pushDIM dimming application, short press(<1s) the pushbutton 5 times quickly within 3s , then long press(>1s) the pushbutton 1 time,The driver will automatically switch to the pushDIM dimming mode.
- After switch to the pushDIM control mode, CorridorDIM mode will be automatically closed.

Remarks:

Max. 50 drivers per pushDIM control line.


Turn on or turn off:short press pushbutton for 0.2-1s.

Dimming: long press pushbutton for 1-5s.

Power on status: after power on,the light state will be the same as the lighting on state.

If the light is on before power on,the light will be on after power on again,brightness will be the same as the last lighting on brightness.

If the light is off before power off,the light will be off after power on again,short press the pushbutton,then the light will be on,the brightness will be the same as the last brightness.

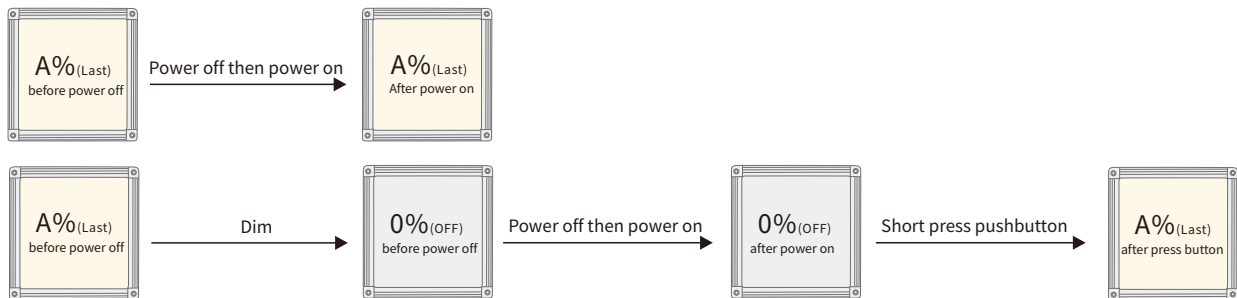

Multiple lights synchronize control operation

method 1:

Step 1:long press the pushbutton,confirm each light is on.

Step 2:short press the pushbutton,confirm each light is off.


Step 3:long press the pushbutton,confirm each light is from darkest to brightest and all the lights are synchronous.

method 2:

- Long press the pushbutton 15s,all lights output to the brightest state.

1-10V/10V PWM dimming application

Wiring diagram

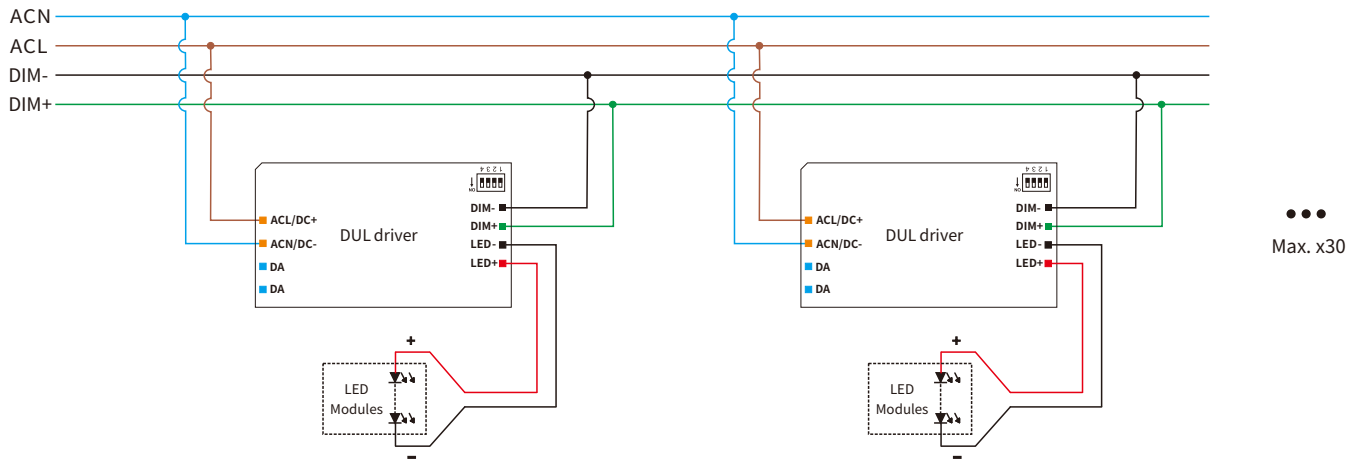

Switch to the 1-10V / 10V PWM dimming mode


- Method 1: After installation according to the wiring diagram of the 1-10V / 10V PWM dimming application, adjust the dimmer to the minimum and then to the maximum, the driver will automatically activate the 1-10V control mode.
- Method 2: Short-circuit the DIM+ and DIM- ports for 2s, the driver will automatically activate the 1-10V control mode.

Remarks:


- Dimming interface characteristics: 0.9V and below are closed, 1V is the darkest, 10V is the brightest, 1-10V is the dimming range.
- The dimming interface distinguishes between positive and negative, DIM is positive, GND is negative, please do not reverse.
- Dimming interface does not support voltage access higher than 20V, otherwise it will cause damage to the internal components.
- When the dimming interface is open, the driver outputs the maximum current. When the interface is short-circuited, the current output is closed.
- When multiple synchronous dimming is required, the positive poles of the dimming interface of each driver are connected together, and the negative poles are connected together.
- Support passive dimmer or isolated active dimmer dimming, does not support non-isolated active dimmer dimming.
- In general, it is recommended that the number of mounted drives does not exceed 30pcs, and the wiring length does not exceed 100m.
- It is recommended that the dimming wires should not be lower than the 22AWG wire.
- Do not put the dimming wires with high voltage or interference sources. If it is unavoidable, please use the shielded wires.
- It is recommended to conduct sample test first and confirm the dimming effect before bulk purchase.
- If you need a drive with 0-10V dimming characteristics, please contact BOKE.

Dimming curve

Output current vs. Dimming Voltage(Typical)

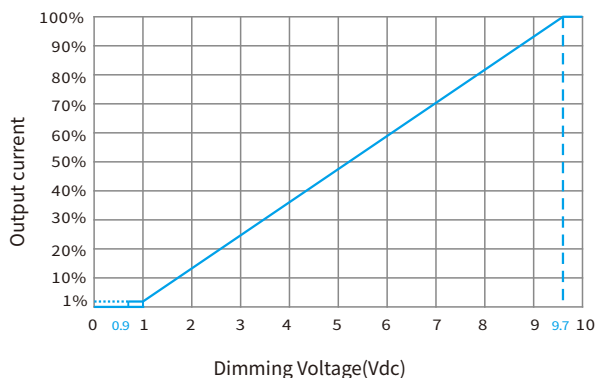


Output current 10V PWM Duty Cycle(Typical)

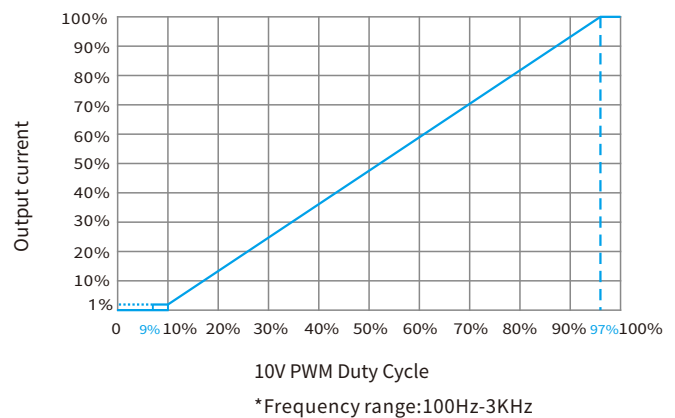

100K potentiometer dimming application


Wiring diagram

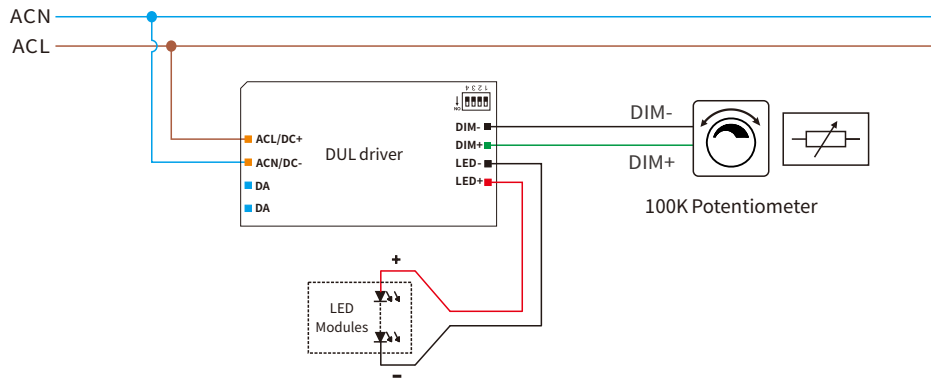

Remarks:


- Only one driver can be mounted in the potentiometer dimming mode.
- Dimming interface does not support voltage access higher than 20V, otherwise it will cause damage to the internal components.
- When the dimming interface is open, the driver outputs the maximum current. When the interface is short-circuited, the current output is closed.
- It is recommended that the dimming wires should not be lower than the 22AWG wire.
- Do not put the dimming wires with high voltage or interference sources. If it is unavoidable, please use the shielded wires.
- It is recommended to conduct sample test first and confirm the dimming effect before bulk purchase.
- If you need a drive with 0-10V dimming characteristics, please contact BOKE.

Dimming curve

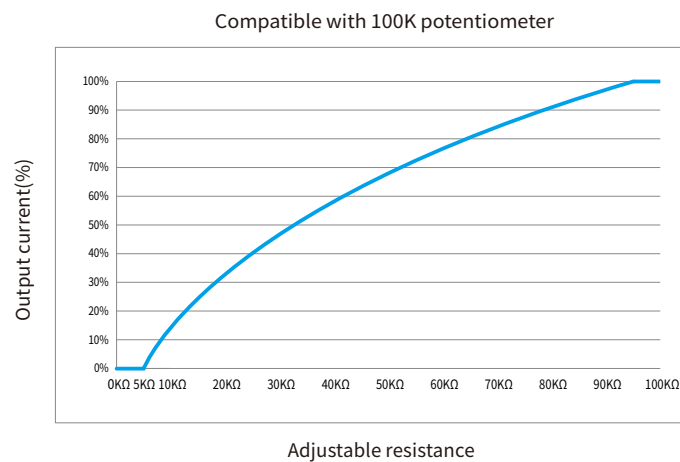

corridorDIM dimming application

Wiring diagram

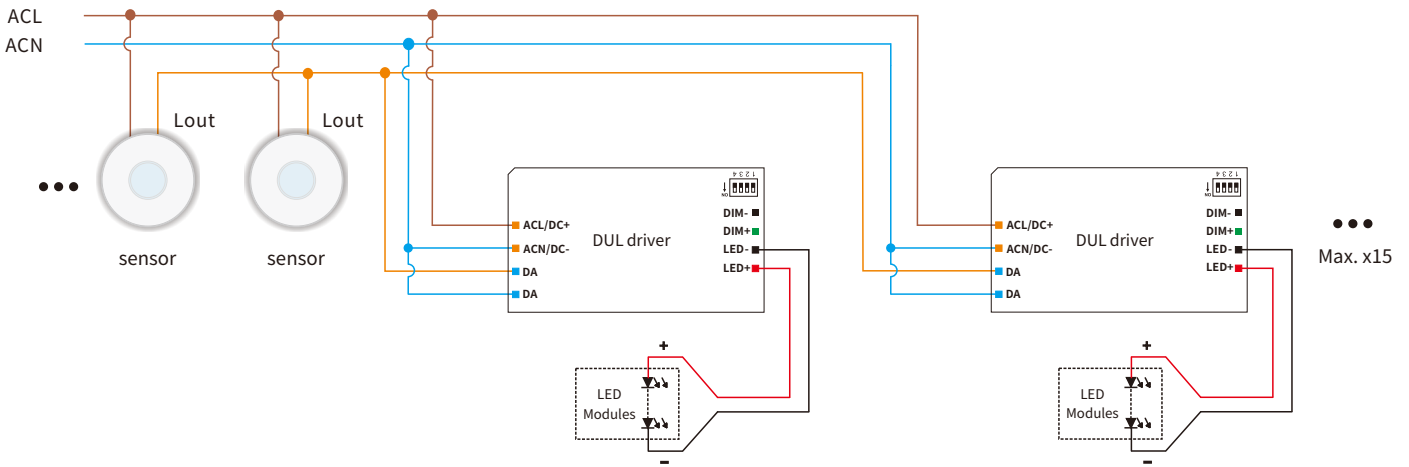

Switch to the corridorDIM dimming mode

- Method 1: Switch by sensor.

After installation according to the wiring diagram of corridorDIM dimming application, you can use the following two methods to switched.

Method 1: Keep the movement in the effective sensing area for 5 minutes, the corridorDIM dimming function of the driver will be switched and light up 100% (under the default setting).

Method 2: Switch by Hold-time

Set the hold-time of the sensor to more than 5 minutes. When the motion sensor detects a person and turns on the output for 5 minutes, the corridorDIM dimming function will be switched and the light will be on 100% (Default), finally restore the hold-time that the sensor actually needs.

-Method 2: Switch by normal switch


After installation according to the wiring diagram of the corridorDIM dimming application, first replace the sensor with a normal switch, and then turn on the normal switch for 5 minutes, and the driver will automatically switch to corridorDIM dimming mode, then remove the normal switch and replace it with the sensor.

- After switch to the corridorDIM dimming mode, the pushDIM dimming mode will be automatically deactivate .

Remarks

- During normal working,It is recommended to set the hold-time of the motion sensor to the minimum.
- Need to use a motion sensor with AC switch.

corridorDIM working process

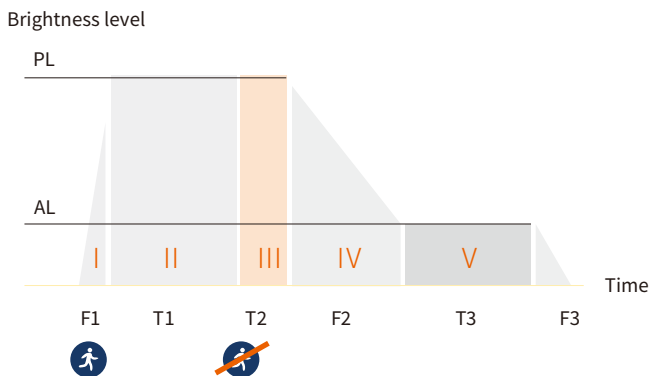


Name	Symbol	Factory setting	Settable range
Fade-in time	F1	1s	0-100s
Presence level	PL	100%	0-100%
Hold-on time	T1	By sensor setting	
Run-on time	T2	180s	0-60000s
Fade-out time	F2	5s	0-100s
Absence level	AL	10%	0-100%
Stand-by Time	T3	unlimited	0-59999s,60000s(unlimited)
Fade-off time	F3	0s	0-100s


- The parameters of corridorDIM can be set through the configuration tool.
- corridorDIM is not activated by default.

Device configuration

Optional 1:

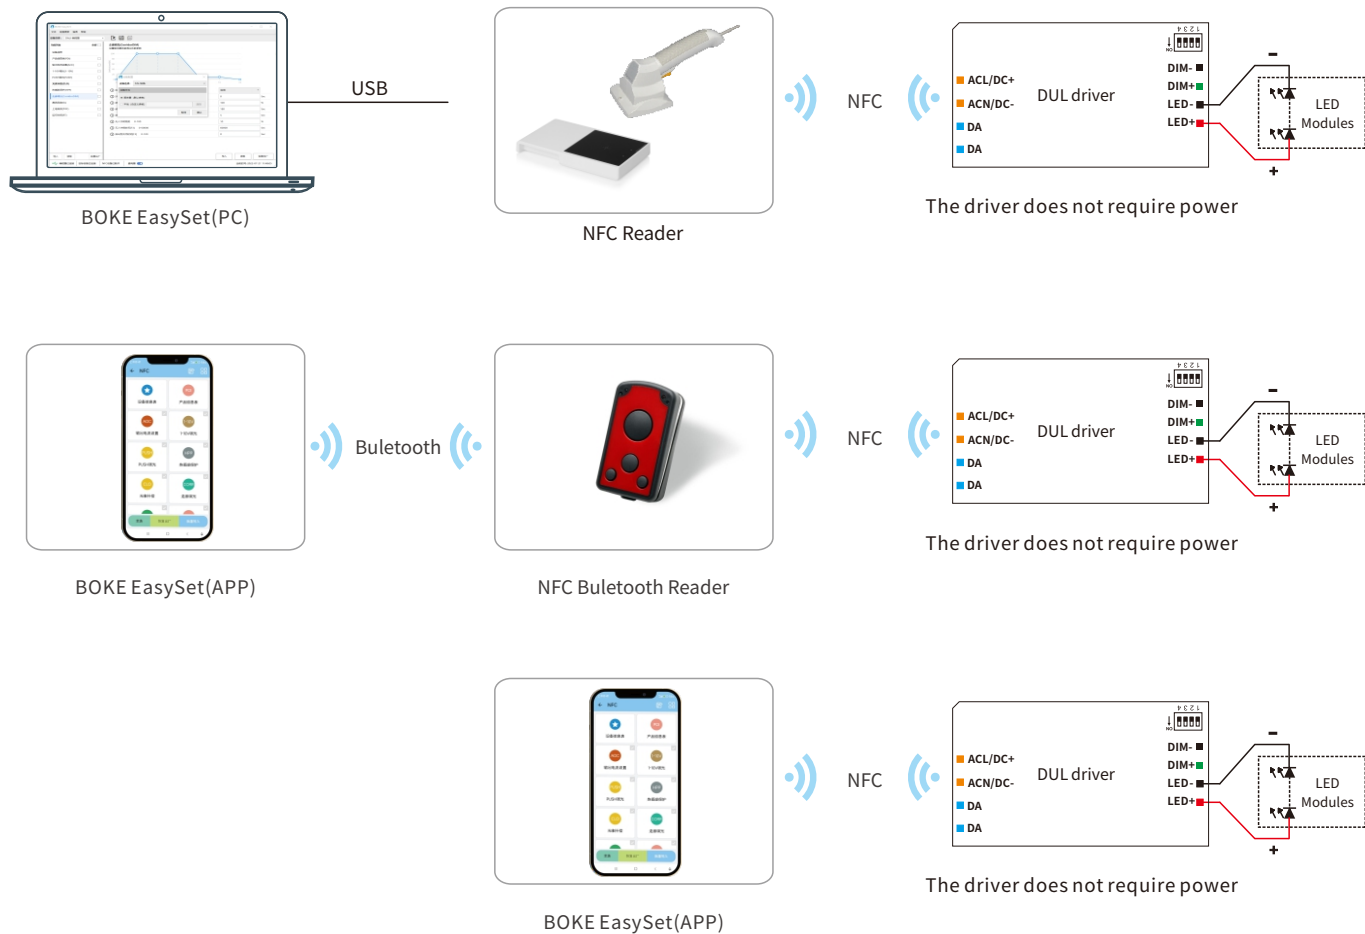

Optional 2:

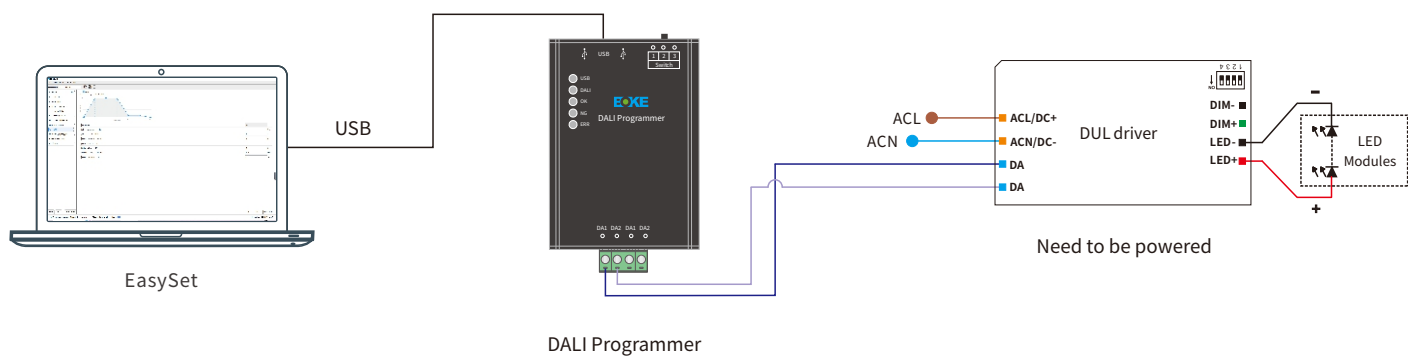

Software download(PC&mobile)



PC:Windows7/Windows10/Windows1132bit/64bit;
Mobile:Androidsystem≥6.0, iossystem≥14.0.

Configure tools and software

Type	Name	Brand	Name	BOKE EasySet minimum version	
				PC	APP
Programmer	NFC desktop Reader	FEIG	CPR30+	V1.1.0	-
	NFC handheld Reader	FEIG	ID ISC-PRH101-USB	V1.2.2	-
	NFC Bluetooth Reader	FEIG	ID ECCO Smart HF-BLE	-	V1.0.0
	DALI programmer	BOKE	BK-CS01-SDL	V1.0.0	-
Software	PC Software	BOKE	BOKE EasySet	V1.0.0	-
	APP	BOKE	BOKE EasySet	-	V1.0.0

Parameters configure

Configuration items	Factory settings	Parameter configuration	Read/Write
Product information	-	NO	Read Only
Adjustable output current(AOC)	Activated	YES	Read/Write
PUSH dimming(pushDIM)	Activated	YES	Read/Write
Corridor dimming(corridorDIM)	Activated	YES	Read/Write
Emergency lighting(EL)	Activated	YES	Read/Write
Power-on fadeing(POF)	Deactivated	YES	Read/Write
Constant light output(CLO)	Deactivated	YES	Read/Write
Hot plug-in protection(HPP)	Deactivated	YES	Read/Write
Run-time(RT)		NO	Read Only
Other parameters		YES	


Note: The default factory mode of emergency lighting is derated mode, and the emergency brightness is 15%

Mechanical Specification

Size(Excluding accessories)

Unit:mm


DUL040-B

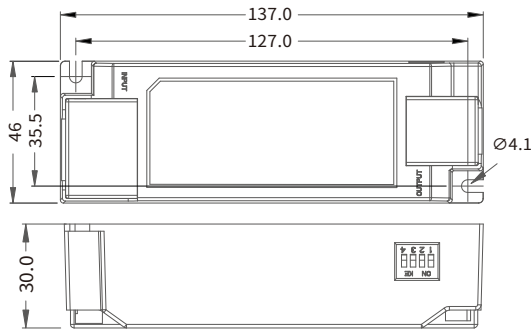

INPUT

Numbering	function	colour
1	ACL/DC+	orange
2	ACN/DC-	orange
3	DA	blue
4	DA	blue

Input wire




Mechanical Specification

Size(Include accessories)

Unit:mm


DUL040-B

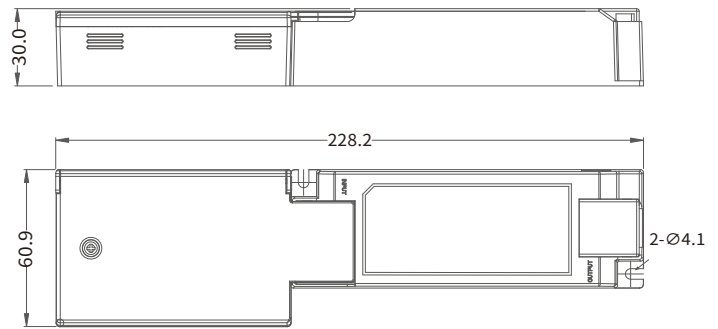

OUTPUT

Numbering	function	colour
1	DIM-	black
2	DIM+	green
3	LED-	black
4	LED+	red

Output wire



Installation note

Hot plug-in

- Hot plug-in is not supported due to residual output voltage of > 0 V.
- If a LED load is connected the device has to be restarted.
- Restart can be achieved by re-powering the driver or executing a on/off command (action) through the control interface.

Wiring guidelines

- All connections must be kept as short as possible to ensure good EMI behaviour.
- Mains leads should be kept apart from LED Driver and other leads (ideally 5 – 10 cm distance)
- Max. length of output wires is 2 m.
- Incorrect wiring can damage LED modules.

Installation requirements

- The driver should be installed in a dry, acid-free, oil-free, fat-free environment.
- The installation ambient temperature of the driver shall not exceed the value of Ta at any time.
- The temperature of the mounting surface of the driver should be lower than the temperature of Ta.
- The driver should keep a certain distance from the heating stuff (such as the luminaire radiator).
- If the driver is used externally (it needs to be used with the accessories), the installation of the driver should also meet the following conditions:
 - 1.The driver should be a certain distance between the drivers, as shown in Figure 1.
 - 2.The driver keeps a certain distance from surrounding objects, as shown in Figure 2.
 - 3.Two power outputs cannot be connected in parallel.

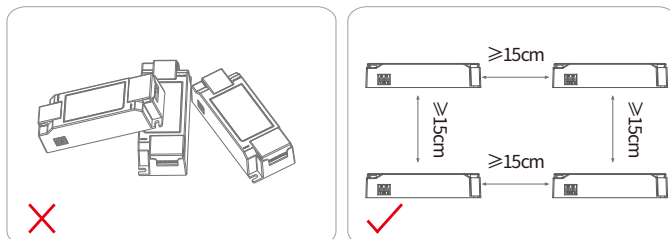


Figure 1


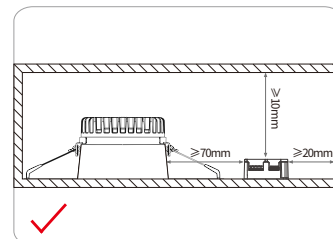


Figure 2

Packaging

Optional 1: factory default

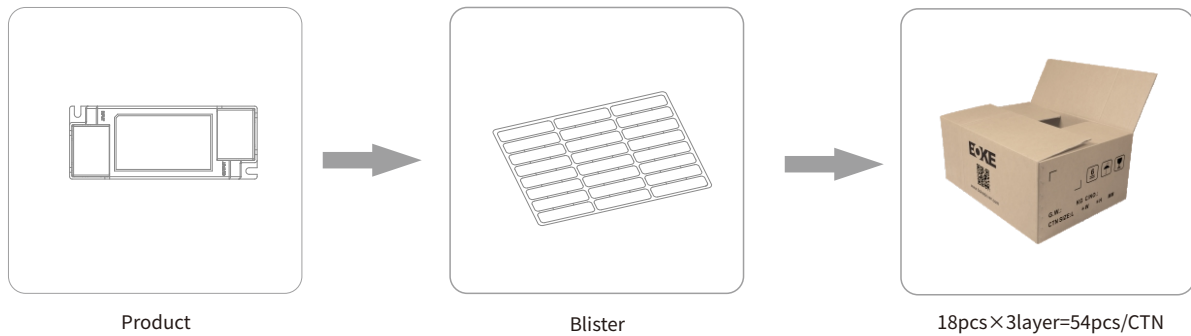

Model	Product size	Weight	Blister size	Carton size	Qty/carton	N.W	G.W
DUL040-B	L137*W46*H30mm	150g	L430*W340*H48mm	L450*W350*H180mm	54pcs	8.10kg	9.21kg

Optional 2:



Model	Product size	Weight	Packaging size	Carton size	Qty/carton	N.W	G.W
DUL040-B	L137*W46*H30mm	150g	L160*W35*H55mm	L335*W300*H170mm	48pcs	7.20kg	8.60kg

Additional information

1. This product can only be used outside the light body, Can not be used inside of the light, and it must be used within the specified working environment.
2. The life and MTBF of the product are for reference only, and do not represent a warranty statement.
3. For more information, please send an email to info@bokedriver.com.